

Citation Theatre Spinnet



LOWREY CITATION THEATRE SPINET (Model GAKH-1). . . A Stereo Organ with a Lot of "Brass!"

Featuring the exciting and exclusive Brass Symphonizer — an electronic marvel that lets you add a complete "Big Band" brass section with the push of a button!

This compact, solid-state stereo theatre organ does just about everything. With the mere push of a button you can add the brass sounds of a saxophone, tuba, cornet and post horn plus the sounds of three other horn instruments. But that's not all! You get all of the famous Lowrey features like built-in Stereo Cassette Recorder, Automatic and Reverberating Rhythm, Glide, Golden Harp and AOC (Automatic Organ Computer) — the Lowrey exclusive which uniquely converts your one-finger melodies into harmonious three and four-note chords.

In addition, enjoy the realistic imitation of a muted trumpet and the percussive simulation of brilliant chimes.

A completely solid-state, Large Scale Integrated Circuit (L.S.I.C.) and transistor, stereo theatre spinet organ with two 44-note keyboards and a 13-note pedalboard.

The system includes two high-fidelity 35-watt amplifiers, together with four special speakers: one heavy-duty 12" bass (Main), one 10" bass (Leslie), one 6x9" high-range (Main) and one 10" high-range (Leslie).

Also included is a stereo headphone jack for playing in privacy, an auxiliary input jack for special hookups and built-in output sockets for two external tone cabinets.

Dimensions: 40-7/8" high, 47-1/2" wide and 26-1/4" deep. Available in Walnut.

UPPER KEYBOARD (Pg. 34)

VOICES

Trombone 16	Kinura 8	Tibia 8
Clarinet 16	Cello 16	Tibia 4
Trumpet 8	Violin 8	Tibia 2-2/3
Oboe 8	Tibia 16	Tibia 2

CONTROL TABS

Reed String. . . Full
Tibia 4. . . Full
Tibia 2-2/3. . . Full
Tibia 2. . . Full

COUPLERS

Reed String 4

LOWER KEYBOARD (Pg. 37)

VOICES

Tibia 8	Violin 8	French Horn 8
Diapason 8	Cornet 8	English Horn 8

CONTROL TABS

Accompaniment 8. . . Medium
Accompaniment 8. . . Full

PEDALS (Pg. 39)

VOICES

Pedal 16	Pedal 8	Bass Guitar 8
----------	---------	---------------

CONTROL TABS

Pedal. . . Soft	Lower to Lower 4
Pedal. . . Medium	Solo to Accompaniment
Pedal. . . Full	
Pedal Sustain. . . Off/On	

COUPLERS

Lower to Lower 4
Solo to Accompaniment

GENERAL CONTROLS (Pg. 41)

Brilliance. . . Full
Console Lights. . . Off/On
Console Lights. . . Dim/Bright
Expression Pedal
On/Off Switch with Pilot Light

SPECIAL FEATURES (Pg. 42)

AOC - AUTOMATIC ORGAN COMPUTER

AOC. . . Off/On

AUTO WOW

Auto Wow. . . Mute
Auto Wow. . . On
Auto Wow Range. . . High
Auto Wow Attack. . . Slow/Fast
Auto Wow Decay. . . Slow/Fast

CHIMES

Chimes. . . Off/On

GLIDE

Glide. . . Normal/Vibrato Cancel
Glide Control on Expression Pedal

GOLDEN HARP

Golden Harp Control on Expression Pedal
Golden Harp Speed Control. . . Slow/Fast

MULTI-CHANNEL CHORUS

Multi-Channel Chorus. . . Off/On

LESLIE SPEAKER

Leslie Tremolo. . . Off/On
Reed/String/Diapason. . . Main/Leslie
Tibia. . . Main/Leslie
Add Main to Leslie. . . Full
Leslie. . . Internal/External

PERCUSSION

Percussion. . . Off/On	SUSTAIN
Percussion. . . Short/Long	Sustain. . . Medium
Percussion. . . Tibia/Reed String	Sustain. . . Long
Percussion Repeat. . . Off/On	
Marimba Repeat. . . Off/On	
Repeat Speed Control	
Manual Attack. . . Normal/Slow	

REVERB

Reverb Length Control	VIBRATO
Reverb Selector. . . Leslie/	Vibrato. . . Off/On
Main & Leslie/Main	Vibrato. . . Light/Heavy
	Vibrato. . . Slow/Fast

BRASS SYMPHONIZER (Pg. 74)

VOICES

Flugel Horn	Krumet Horn	Tuba	Saxophone
Cornet	Post Horn	Trumpet	

CONTROLS

Cancel - Upper Manual
Cancel - Preset
Tremolo Speed. . . Slow/Fast
Tremolo Intensity. . . Off/Full
Brass/Auto Wow Volume. . . Low/High

AUTOMATIC RHYTHM (Pg. 58)

AUTOMATIC RHYTHM PATTERNS

LATIN AMERICAN	AMERICAN	TRADITIONAL
Bosa Nova	Go-Go	March Polka
Samba	Dixie	Waltz
Rhumba	Shuffle	Swing Waltz
Cha-Cha	Swing I	
Mambo	Swing II	

REVERBERATING RHYTHM (Pg. 59)

Bass Drum	Brush	Blocks
Snare - One Shot	Cymbal	Clave Bongo
Snare - Roll	Tom-Tom	Castanets

RHYTHM CONTROLS (Pg. 58)

Rhythm Volume
Rhythm Balance
Rhythm Tempo & Metronome Switch
Start Switch
Downbeat Indicator Light
Reverberating Rhythm On/Off Switch
Brush Accent

STEREO CASSETTE RECORDER (Pg. 70)

Record	Play-Record	Pitch Control
Stop	Volume Control	
Rewind	Playback Balance. . . Main/Leslie	
Fast Forward	Microphone Input Jack	