

In order to find out what software version you have in your Prestige, you can find out by:

With the power off, press and hold six of the upper keyboard keys (C5,E5,F5,A5, B5, and C6) **SKIP D5 AND G5!** Continue holding down the above six keys while you press and release the power button. Keep holding the six keys down until the software version appears on the display then release the six keys. If you have see Style 7919 or 8031, you do not have the current upgrade, it should be Style 5544. You can exit from the version mode by touching the feature/clear button.

By Carl Short